



1. Login to the video recorder using Putty.
2. Run the hDSM and navigate to System Configuration -> File Sharing -> Enable File Sharing.
3. On a Windows PC go to Start -> Run and type [\\recorder_ip\Share](#).

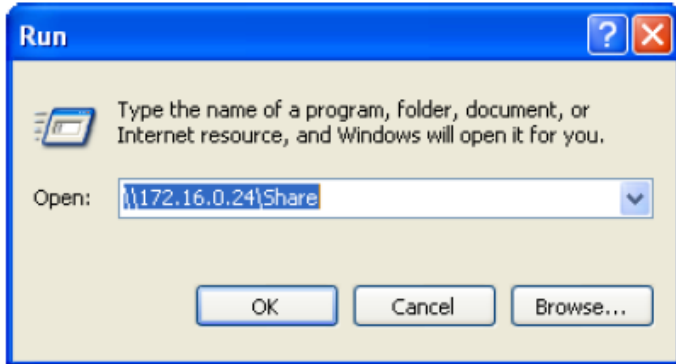

4. Copy the file (`instek-hdvr.run`) into the `\Share` directory on the video recorder.
5. Execute the file (`./instek-hdvr.run`) using putty.

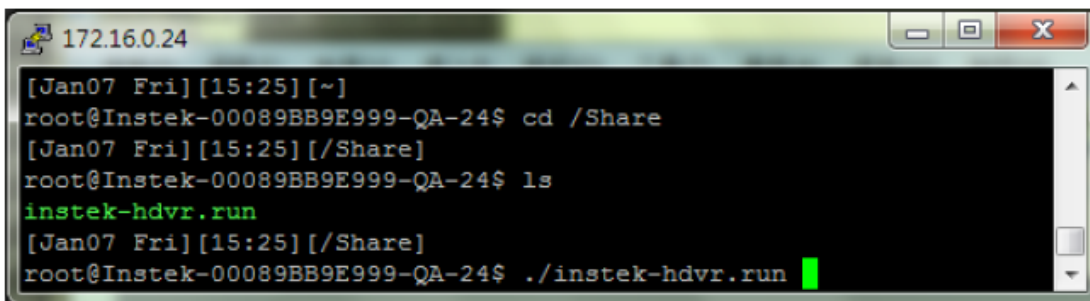

```
[Jan07 Fri] [15:25] [~]
root@Instek-00089BB9E999-QA-24$ cd /Share
[Jan07 Fri] [15:25] [/Share]
root@Instek-00089BB9E999-QA-24$ ls
instek-hdvr.run
[Jan07 Fri] [15:25] [/Share]
root@Instek-00089BB9E999-QA-24$ ./instek-hdvr.run
```

6. Reboot the recorder after the script has completed.